



Brower Timing Systems
Test Center-System
JAN 2012


User's Manual

Power On/Off


To power up the *TC-Timer*, press and hold the *On/Off* button for 2 seconds. The *Manual Start* button will simulate a remote start, and is helpful in learning how the timer works.


Power On PhotoGates A & B


Press and hold the *On/Off* button until *TC-PhotoGate A* beeps, then buzzes continually. For *TC-PhotoGate B*, hold button until the desired distance is selected.

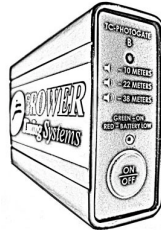
Line up PhotoGates A & B

Align *TC-PhotoGate B* to *A* until it stops beeping. Find eye center by rotating *B* to one side until *A* starts beeping then repeat to the other side. Set *B* in middle of these two positions.

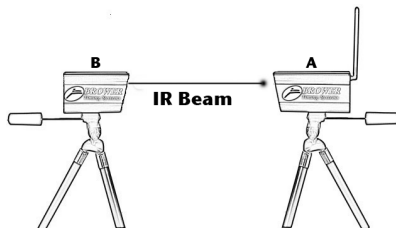

Power on TC-Start Pod

Plug *Touch pad* or *Foot wand* into the *TC-Start Pod*. Press and hold the *On/Off* button until one beep is heard.

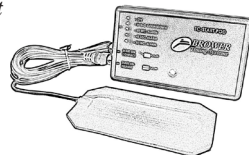

Quick Start Guide	i
Operating Your TC-Timer	2
TC-PhotoGate Setup	5
Setting Up Your TC-Start Pod	7
TC-Start Pod Settings	8
TC-Timer Computer Communication	10
Test Identification Number (T id)	10
TC-Timer Modes	11
Chronograph Mode	11
Split Interval Diagram	13
1/1000th Mode	14
KPH/MPH Mode	14
Count Mode	15
Score Mode	15
Frequency Select Mode	16
RSSI Mode	16
TC-Display	17
TC-Results Center Software	18
Multiple System Setup	18
Troubleshooting	19
Battery Replacement	20
Caring For Your System	20
Specifications	20
Warranty	21
FCC Regulatory Compliance Information	21

Operating Your TC-Timer

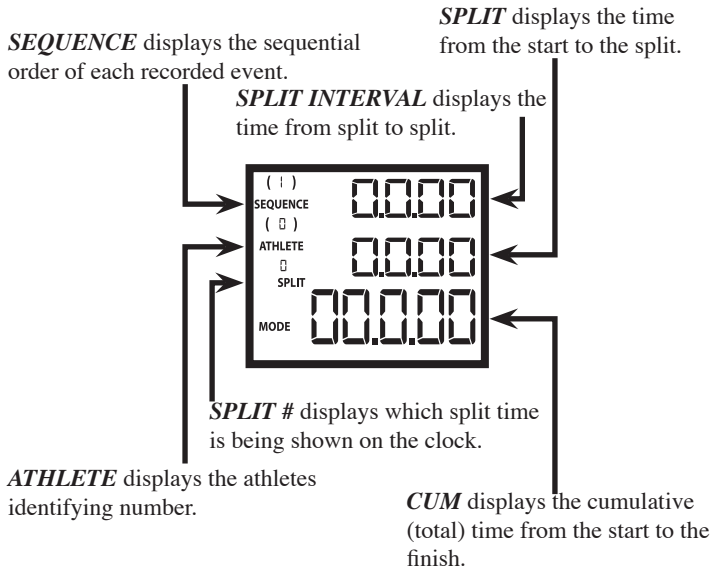

(1) SEQUENCE

Sequence

Sequence # is a chronological counter. (1 to 199) It advances when the **New** button is pressed, this helps the user keep track of times when using **Memory Review**.



Power On/Off

To power up the **TC-Timer**, press and hold the **Power On/Off** button for 2 seconds. The data from the last session is still in memory until memory is cleared. The clock is now ready to receive radio signals.



Memory Clear

Press and hold both buttons at the same time for approximately four seconds. Memory will clear and the clock will be reset to **Sequence #1**. ****All past times will be lost.****



New Athlete

To start a new athlete, press the **New** button and a reset clock is shown. If in **Memory Review**, use the up arrow to get to the latest sequence which will show a reset clock. (This is the only time the **Athlete #** can be adjusted.)



Athlete # Adjust

Athletes can be assigned an identifying number. Use **Split/Scroll** arrows to assign an **Athlete #**. This may only be assigned before the clock starts for that athlete. (If in **Memory Review**, use **Up Arrow** to get to the latest sequence) After the desired number is reached, the start will lock the **Athlete #** to the time. If no adjustment is made for the next athlete, the same **Athlete #** will be assigned to the upcoming time. Press and hold the buttons to engage a high speed scroll.





Athlete Memory Review

To review times, press the *Memory Review* buttons. Holding down either button will engage the high speed scroll. The sequence will adjust accordingly. The *Athlete #* will be displayed also.



Memory Review



Split Review

Press *Split/Scroll* buttons to review an athlete's split times. (Up to 9 splits possible) The Split counter will adjust as each split is viewed.



Split/Scroll




Manual Start

Press button to manually start, split or finish the timer. (Similar to a stopwatch) Using this function reduces the accuracy of an athletes time due to human error.



TC-PhotoGate Setup

- Set up the TC-PhotoGate units as displayed below at the *START*, *SPLIT* or *FINISH* location.
- Turn on *TC-PhotoGate A* by pressing and holding the power button for 2 seconds, it will beep then buzz continually, the green LED will also flash.
- Point *TC-PhotoGate B* in the direction of *TC-PhotoGate A*.

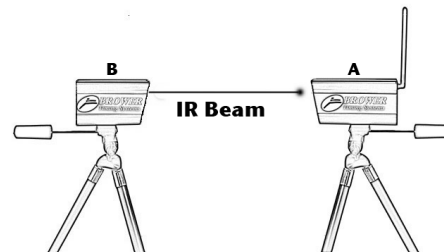

- Turn on *TC-PhotoGate B* by holding down the *On/Off* button until the desired power level is selected.* The blinking green light indicates the unit is on. *TC-PhotoGate B* emits an infrared (IR) light beam that is detected by *A*.
- Align *TC-PhotoGate B* by directing it toward the *TC-PhotoGate A* until it stops beeping. Center beam alignment by moving *B* in and out of alignment. The *A* unit will no longer sound when centered.
- To power down *PhotoGates A & B*, press and hold the *On/Off* button for two seconds. A low tone beep will indicate power off.

*The *TC-PhotoGate B* has three IR power settings indicating the maximum possible distance between *TC-PhotoGates A & B*.


Beeps	Power	Meters	Hours of Battery Life
1 Beep	Low	10	220
2 Beeps	Medium	22	140
3 Beeps	High	38	60

Application Tip

1. For the most accurate and repeatable results, set the IR light beam at the belt height of the athletes. This will be high enough so that the legs of the athletes do not break the IR light beam. This is also low enough that swinging arms and hands of the athlete will not prematurely break the IR beam.


2. To avoid unnatural hand reaching to break the beam, set *TC-PhotoGates A&B* 15-30 feet apart with the running lane in the middle. Set the finish beam so it is **not** on a visible finish line. This will make it difficult for athletes to know where to reach out and break the beam with a hand, which can result in a faster time.

Setting Up Your TC-Start Pod

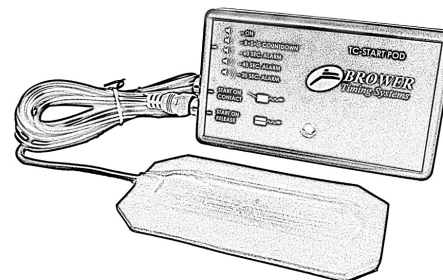


- **Start on Release Jack:** When plugged into this jack, the unit will beep when first touched. When pad is released, the unit will send the radio start signal to the TC-Timer
- **Start On Contact Jack:** When plugged into this jack, the unit will send the radio start signal and beep when the pad is first touched.

There are 3 switch devices that can be plugged into the *TC-Start Pod*.



FOOT WAND (FW)

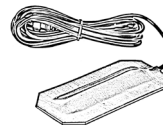

TOUCH PAD (TP)



MICROPHONE (MIC)

TC-Start Pod Settings


➤ To power up the unit, press and hold the *On/Off* button until the desired setting is selected. (The *TC-Start Pod* lies on the ground.)

TC-Start Pod Settings		Start on Release Jack	Start on Contact Jack
1 Beep:	On	TP, MIC	TP, FW
2 Beeps:	Ready Set Go	TP	
3 Beeps:	60 Second Alarm		TP, FW
4 Beeps:	45 Second Alarm		TP, FW
5 Beeps:	30 Second Alarm		TP, FW



ON Setting with Touch Pad

Plug *Touch Pad* into *Start On Release* jack. For three or four point stance starts, place the *Touch Pad* on the starting line using fingers to depress the center of the pad. The beep from the *TC-Start Pod* will confirm contact has been made. When the pad is released the time will start. The *Touch Pad* can also be used as a foot pad, place it under the rear foot of the athlete while the front foot is on the starting line.



ON Setting with Foot Wand

Plug *Foot Wand* into *Start on Contact* jack. Slide red strip up so it is positioned at a 30 degree angle. Position rear foot with the toe underneath the red strip. The athletes toe should strike the strip when starting. When the red strip is struck the time will start.



ON Setting with Microphone

Plug *MIC* into *Start on Release* jack **before powering on**. The microphone will trigger a transmission when any loud sudden noise is detected. The intended use for this option is with a cap gun. Hold the *MIC* in the same hand as the gun. Experiment with the *MIC* location for best results. It could also be placed in a baseball glove or taped to a bat. Experiment for best results.

Ready Set Go Setting

(R.S.G.)

Plug the *Touch Pad* into the *Start on Release* jack. In this mode the *Start Pod* will send out a “Ready” beep, “Set” beep and “Go” beep at random intervals. When the “Go” beep is heard, the *Start Pod* sends a radio start, when the athlete releases the *Touch Pad*, the unit sends a second signal. The second signal is the athletes reaction time from “Go” beep to movement and will show as a split time.

Alarm Setting

(Used with the *TC-Timer* “Count Mode”)

The alarm setting is simply a set time to perform a test. For example, how many box jumps in sixty seconds. Using this setting reduces the error of the person counting the number of jumps. Plug the *Touch Pad* into *Start on Contact* jack. When the operator touches the *Touch Pad* a R.S.G. start sequence begins. The finish buzzer will sound after 60, 45 or 30 seconds. The operator will use the *Manual Start* button on the *TC-Timer* to count the repetitions.

Application Tip

1. Electronic start sprint times are always slower than “start on movement hand times” this is due to the reaction time of the stopwatch operator. Studies have shown reaction times to be between 16-24 hundredths of a second. The general conversion for “start on movement hand timing” to “electronic start timing”, is to subtract 20 hundredths of a second from the electronic total time.
2. A *Foot Wand* start will result in a slightly faster overall sprint time in comparison to the Touch Pad start. This is because the athlete has already begun his forward movement when he strikes the Wand.
3. If more radio transmission distance is needed between the start pod and TC-Timer, setting the pod on a box 6” off the ground will give another 400 feet in distance.

TC-Timer Computer Communication



The timer is available in two forms, *TC-Timer* and *TC-Timer USB*

If *TC-Timer USB* is purchased, it will have a computer USB port next to the antenna. This allows user to export data from the timer to a PC. To export data, Plug USB cable into the *TC-Timer* and connect to computer. Open *TC-Results Center*, and click *Get Memory* on the computer screen.



Test Identification Number (T id)

T id numbers allow the user to add a test identification number to a specific group of times. Once the identified data is downloaded to a computer, the test times can be organized and given a label, i.e. Test # 1 - 40 yard dash. For tests like the bench press or box jump, the weight or number of jumps can be entered into the *TC-Timer*. *T id* numbers (0-9) are input to the *TC-Timer* when selecting a mode.

With the *TC-Results Center* software the user will be able to customize timing data on a computer into:

- Grouped test results
- Individual athlete profiles
- Sort by rank for each test #



Use buttons to enter in the test ID #.



Split/Scroll




The difference between the *TC-Timer* and the *TC-Timer USB* is the ability to export data to a computer.

TC-Timer Modes

For both *TC-Timer* and *TC-Timer USB*

Use the *Mode* button to scroll through the mode options. When on the desired mode, use the *Split/Scroll* arrows to enter the *T id* #. Press *Enter*. The *TC-Timer* is now setup to time the event and input results in to the *Count* and *Score* modes.


Chronograph Mode

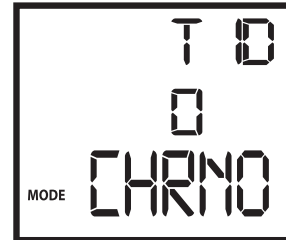

Chrno mode is the principal mode used for the majority of timing applications. When powered on, the *TC-Timer* automatically enters this mode.

If doing two different timed tests in this mode, be sure to give each test a different *T id* #.


Enter

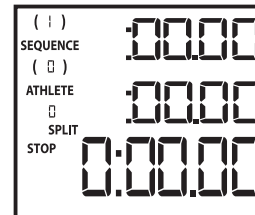



Description continued on pages 12, 13.

LIVE VIEW



The following examples show what the user will see during a live timing.

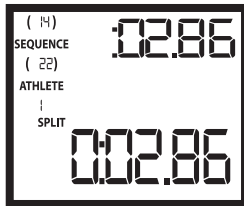


Split #1

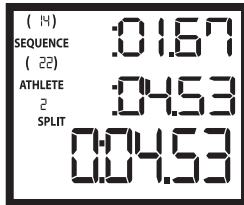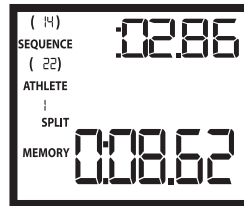

Split #2

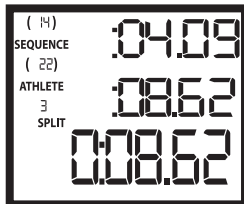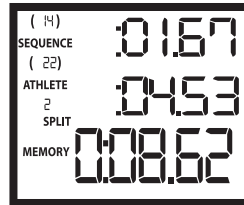

Finish

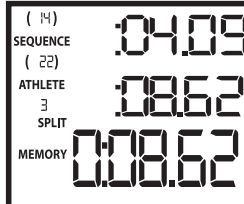

The first time the **NEW** button is pressed it will advance the **SEQUENCE** and will clear the clock.


The second time the **NEW** button is pressed it will enter **Memory Review**. The user is then able to navigate the Timers' memory using the **Up** and **Down** arrows. To review split times use **Split/Scroll** arrows.

MEMORY REVIEW VIEW


The following examples show what the user will see in **Memory Review**.

Split Interval Diagram

The following diagram defines **Split Interval**, **Split** and **Cumulative** times.

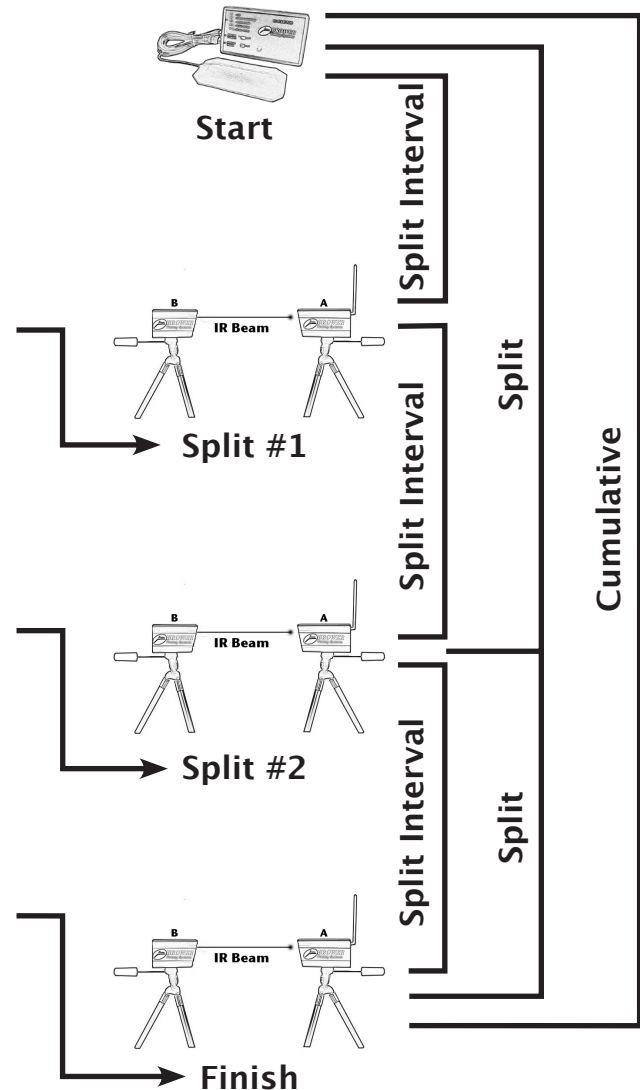


1/1000th Mode

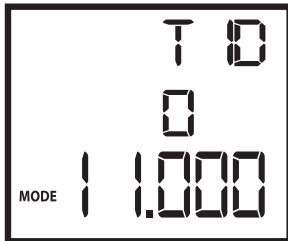


1/1000th mode is similar to the *Chrno* mode but displays 1/1000th of a second resolution. In this mode the display will only time to 9.999 seconds. This mode is useful in timing short spans between the start and finish where extra resolution is needed for differentiation. All of the functions work the same as the “*Chrno*” mode.

Rule: You must have at least 0.12 seconds of time between start PhotoGate and finish PhotoGate.

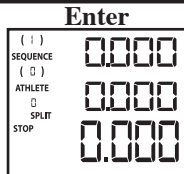


KPH/MPH Mode

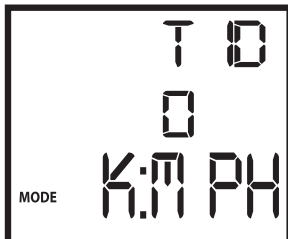


KPH/MPH mode calculates kilometers per hour and miles per hour.

Rule: You must have at least 0.12 seconds of time.


At 20 mph the span needs to be 4 feet or more. At 100 mph it is 18 feet or more.

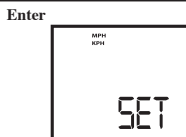

Use *Up Split/Scroll Arrow* to alternate between KPH and MPH.

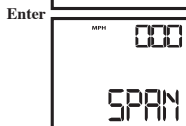


Scroll to set the number of **feet** or **meters** between the two *Photo-Gates*.

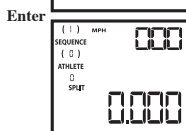


When passing through the start and finish gates, MPH will be seen on the top display and elapsed time on the bottom display. When adding a split, the *TC-Timer* will show MPH on the top display and advancing *CUM* times on the bottom display. Standard *Memory Review* functions will apply.



Count Mode

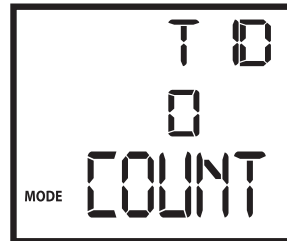

Count mode is used with the *Start Pod Alarm Setting*. Activate the start sequence on the *Start Pod*. Use the *Manual Start* button to count the number of reps between the *Pods* start buzzer and stop buzzer.

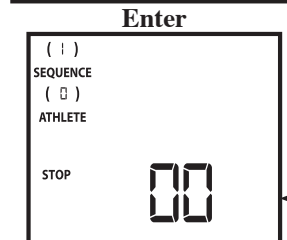


Rep Counter




Score Mode

(*TC-Timer USB version only*)

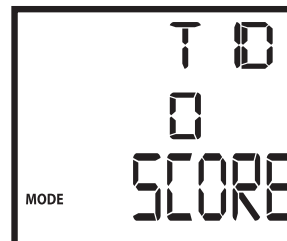

Score mode is for numeric data input. Example: squat or bench press max. By manually inputting this data at the test sight, it will be automatically downloaded to the computers *TC-Results Center* software.

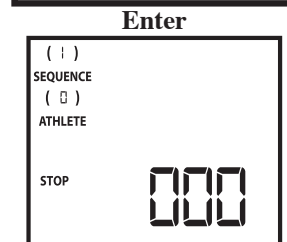

Use the *Split/Scroll* arrows to enter in the *Athlete #*. Press *Manual Start*, the **STOP** symbol on the LCD will disappear, then using the *Split/Scroll* arrows enter the desired score. Press *New* to advance to the next sequence.



Frequency Select Mode



FREQ mode allows the user to change the radio frequency of the timing system. This allows two or more TC Systems to work in the same location. After setting the TC-Timer radio frequency (0-4), the frequency must also be changed to match in *TC-PhotoGate A* and *TC-Start Pod*.


This is done by removing the aluminum case, with the *TC-Stat Pod*, remove the battery compartment door. Locate the blue switch panel and shift a lever. More than one switch cannot be down at the same time.

(All switches up is FREQ 0)



Note: A *TC-Timer* set to *Freq* 0 needs to have 10 feet of separation from a *TC-PhotoGate* set on *Freq* 1-4. Otherwise it will receive an interfering signal.

TC-Display

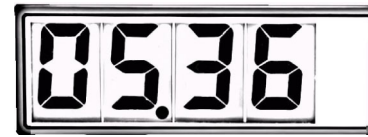

MEM/MODE Button

The *TC-Display* is a hands free timer that will display a time for 10 seconds then will automatically reset to zero. The *TC-Display* has different modes:

- Hold down *MEM/MODE* button until the mode number blinks
- Press the *MEM/MODE* button to scroll through modes
- Hold down *MEM/MODE* button until the TC-Display shows "00"

Mode 0: Displays a start and finish.

Mode 1: Displays a start, split and finish.

Mode 2: Displays continual individual lap times.

Mode 3: Displays Miles Per Hour (beams set 10 feet apart)

Mode 4: Displays Kilometers Per Hour (beams set 3 meters apart).

Mode 5: Displays two consecutive split intervals (curling)

Mode 6: Displays times in 1/1000ths of a second

Mode 7: Displays Meters Per Second (beams set 5 meters apart)

The *MEM/MODE* button can be pressed to scroll through up to 10 previous times. A start will automatically bring the *TC-Display* back to the latest time. If an athlete does not pass through the finish within 99 seconds, the *TC-Display* will reset to zero.

The *TC-Display* will show b-Lo to signal a low battery after power up.


The *TC-Display* is capable of 5 different radio frequencies. Remove the end cap from the side of the TC-Display by removing two small screws. Locate the blue switch panel and switch the appropriate lever. More than one switch cannot be down at the same time.

(All switches up is FREQ 0)



The included Mounting Clamp attaches to the back of the *TC-Display* and can be used as an adjustable tilt stand when in the vertical position.

RSSI Mode

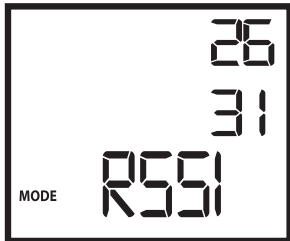

Relative Signal Strength Indicator

RSSI Test Mode allows you to self diagnose the distance capability of reception or problems with signal reception.

Problem I occasionally miss a start or stop signal.

Solution Check RSSI to see if there is radio interference at your location. Indoor

interference could come from equipment i.e. machines and computers, this may be the case if your RSSI reads 30/40 or higher without your *TC-PhotoGate A* transmitting.

Problem I need to time distances over 1000 feet, and I want to know if I will get reliable reception.

Solution Set up your *TC-PhotoGates* and have someone break the beam every three seconds. Go to the desired distance, the RSSI needs to read at least 29/35.

Problem I have noise or other users on my frequency. (38/50)

Solution Try frequency 1, 2, 3 or 4. (Must also be changed in *TC-PhotoGate A* and *TC-Start Pod*.)

TC-Results Center Software

For *TC-Timer USB* Only

- Insert CD (*Windows XP and Vista Only*)
- Drag Brower USB folder to desktop, or copy to desired location
- Setup is complete, open folder and double click the *TC-Results Center* file.
- Once the *TC-Results Center* software is open, click the *Instruction-* button to read complete program instructions.

Multiple System Setup

Up to five TC systems can be used in the same area by using one of five different radio frequency channels. Systems must be spaced at least 10 feet (3 meters) apart.

The *TC-Timer*, *TC-Display*, *TC-Start Pod*, and all *TC-PhotoGates* must be set to the same frequency.

TC-Timer: Use the *Mode* button to scroll to the *FREQ* option. Select 0-4
TC-PhotoGates: Remove the aluminum case. Locate the blue switch panel and shift a lever.

TC-Start Pod: Remove the battery compartment door. Locate the blue switch panel and shift a lever.

TC-Display: Remove two small screws from the side of the display. Pull the end cap out of the metal casing. Locate the blue switch panel and shift a lever. (All switches up is FREQ 0)


More than one switch cannot be down at the same time.



Note: To avoid confusion mark each component with it's frequency.

When setting up two Brower TC Systems in the same area use frequency 0 and frequency 1.

For the least amount of interference between TC Systems:

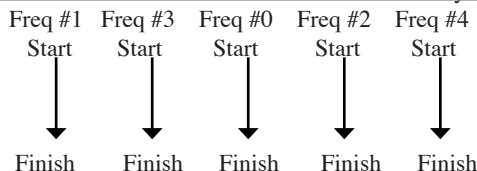

Troubleshooting

Problem One of my timing units does not power up.

Solution 1 All units require you to press and hold the power button for at least 2 seconds to initiate the power up sequence.

Solution 2 Check the battery. The units will warn of a low battery by a red flashing LED on the *TC-PhotoGate A* or *B* and *TC-Start Pod*. (The *TC-Timer* has a low battery symbol on the LCD). The units will work for up to 20 more hours and 5 for the *TC-Timer* with a low battery. If the unit will not turn on, check for dead battery.

Problem My timing system is setup correctly, but the *TC-Timer* won't receive a signal.

Solution Check to see if all the system components are on the same radio frequency. See FREQ on page 14.

Problem I occasionally miss signals.

Solution See RSSI on page 14.

Problem My tripod is broken.

Solution If a single leg is broken, order a new tripod and save the two good legs for future replacement. The legs unscrew from the tripod. (60 day warranty, \$39 replacement)

Problem My touch-pad is correctly installed, but doesn't beep when I press it or beeps multiple times when I press it.

Solution Your touch-pad is worn out, order a new one. (60 day warranty, \$39 replacement)

If you are still not sure the system is functioning correctly, call us at 801-572-5540

"I have found a problem, what do I do now?"

If the system has a defect go to:

http://www.browertiming.com/home_bottom_bar/return_form.htm

and complete instructions to return defective unit.

Battery Replacement

Timer: Remove the battery cover on the lower back of the unit. Install fresh AAA alkaline batteries. Replace the battery cover.
Battery life: 50 hours

TC-PhotoGates A & B: Remove the set screw from the base of the unit. Apply pressure to the front of the unit between the lens and buzzer to slide the unit out of its case. Replace batteries (AAA). Place the unit back into the case and replace the set screw.
Battery life: 220 hours

TC-Start Pod: Remove battery compartment door and replace with one 9V battery.
Battery life: 220 hours

TC-Display: Remove two small screws from the side of the display. Pull the end cap out of the metal casing to expose a battery pack. Pull the battery pack out of the metal casing. Replace batteries (AA). Slide the battery pack back into the metal casing with the batteries facing the back side of the Display. Replace the end cap and two small screws.
Battery life: 100 hours

Caring For Your System

The TC system is water resistant but not waterproof. The general rule is if you can train in the weather conditions, the system can function. If it is raining too hard to train, take the system out of the rain. If components get wet, let them air dry before putting them back into the foam holder. If components get really wet, remove batteries until dry.

Using the Touch Pad with your feet will accelerate wear
When storing the Foot Wand, **do not allow the red strip to severely bend**, a kink in the red strip will cause permanent damage and is not covered by warranty.

Specifications

Radio: Radio transmission distances up to 1000 feet can be received in line of sight applications. Distances can be reduced if **TC-Timer** is in close proximity to electric motors and computers or **TC-Timer** is close against a body.
Frequency: 432.8
Timing Accuracy: 1/1000 of a second.
Radio Switch Accuracy: 0.0005 of a second.

Warranty

The BROWER TIMING SYSTEM is backed by a 1 year warranty covering manufacturing defects. Service, whether covered by the warranty or not can be performed and returned quickly. (Express incoming and return shipping charges are not covered by warranty.)

Touch-pads and tripods wear out with use are only covered for 60 days by the warranty.
When returning a BROWER component, go to www.BrowerTiming.com and click "Repair"

FCC Regulatory Compliance Information

FCC ID: XVABTS

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his/her own expense.

CAUTION: Any changes or modification not expressly approved by Brower Timing Systems could void the user authorization to operate this equipment.

TC-PhotoGate A compliance labeling

This device complies with Part 15 of the FCC Rules:
Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device may accept any interference received, including interference that may cause undesired operation.

Brower Timing Systems
12660 South Fort Street #102
Draper, Utah 84020 USA
Phone 801-572-5540 Fax 801-572-5941
techsupport@browertiming.com